

ActionPro™


2.7K Digital Video Camera

30^{MP} Max / 3.0" TFT

HDV17BK Quick Reference Guide



Product Features:

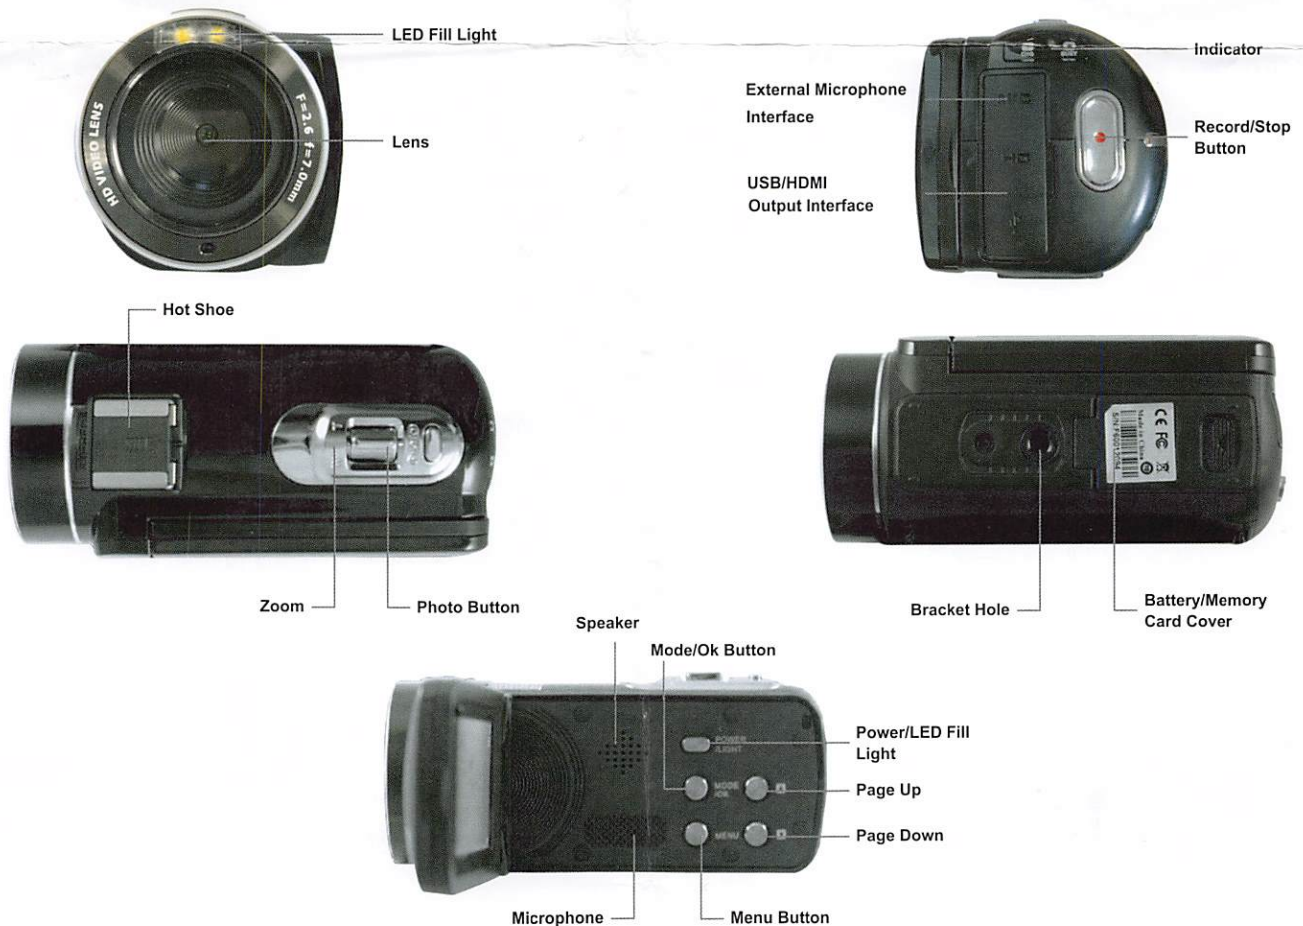

Installing SD Memory Card:

1. Open the battery door by pulling the lever – the door should pop open.
2. Metal contact part should go in first facing up, away from the battery. Insert and push the card in until it clicks into place. Close the door, making sure it is fully locked. A memory card can only be inserted in the proper direction. **DO NOT FORCE THE CARD INTO THE SLOT**



SD Card Position

The SD memory card lock must be in pushed-in position before inserting battery.

Installing the Battery:

Install the rechargeable lithium battery in the battery slot. A battery can only be installed in one specific direction. Do not force or push down hard on the battery. It will install easily if inserted correctly. Make sure the pins are inserted first, facing up.



Battery Lock

The battery lock must be in pushed-in position before inserting battery.


Button Identification:

Power On/Off Button Hold down button more than 3 seconds.	Menu Button Selecting menu options	Mode Button Selecting different modes: Video, camera and playback	Page Up Button In playback mode: press to select up photo or video	Page Down Button In playback mode: press to select down photo or video	Shutter Button Takes photo in photo shooting mode	Zoom In/Out Switch Zoom in and out in camera mode/ video recording mode. Shrink, magnify or move photos in playback mode	Rec / Stop Button To record/stop video in video recording mode
LED On/Off Button Press the button to activate the LED light.		Enter Button Press to select highlighted function					

3 Mode Selection:


- Video mode allows you to take videos and make adjustments to settings. Menu options: Video size, mode set, beauty face, white balance, exposure, ISO, anti-shake, setup.
- Camera mode is to take still photos and adjust camera menu settings. Menu options: Resolution, shooting, mode set, beauty face, face detect, smile capture, white balance, exposure, ISO, quality, sharpness, effect, saturation, anti-shake, metering, date stamp, setup.
- Playback mode allows you to preview photos and videos and delete, rotate, protect, trim and print your photos. Menu options: Delete, protect, rotate, crop image, slide, print.

 Connecting to a Computer:

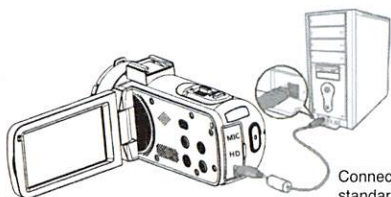

Connect the terminal and the standard USB/TV interface of the machine.

 Connect the terminal and the standard USB interface of the computer

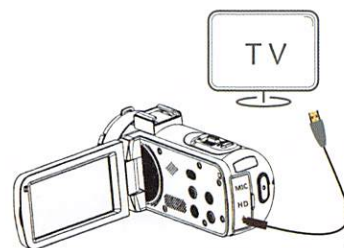

Connect the terminal and the standard HDMI/TV interface of the machine.

Please connect the Terminal to a TV set.